

## **DUAL THERMOSTAT**

## ZR 011




- > NO and NC in one casing
- > Separate adjustable temperatures
- > High switching capacity
- > Terminals easily accessible
- > Clip fixing


Two thermostats in one casing:

**Thermostat (contact breaker, normally closed)** for regulating heaters. The contact opens when temperature is rising. **Thermostat (contact maker, normally open)** for regulating filter fans and heat exchangers or switching signal devices when temperature limit has been exceeded. The contact closes when temperature is rising.

Heaters and cooling equipment can be switched independently from each other with a temperature offset as opposed to the usual change-over contacts.

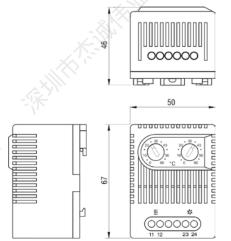

Connection diagram

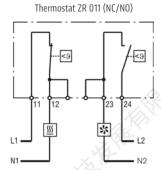

**SSS** Heater

Filter fan, Cooling equipment, Signal device




## TECHNICAL DATA

Switch temperature difference	7 K (±4 K tolerance)			
Sensor element	7 K (±4 K tolerance) thermostatic bimetal snap-action contact > 100,000 cycles AC 250 V, 10 (2) A AC 120 V, 15 (2) A DC 30 W at DC 24 V to DC 72 V AC 16 A for 10 sec. 4-pole terminal, clamping torque 0.5 Nm max.: rigid wire 2.5 mm² (AWG 14) stranded wire¹ 1.5 mm² (AWG 16)			
Contact type	snap-action contact			
Service life	> 100,000 cycles			
Max. switching capacity	AC 120 V, 15 (2) A			
Max. inrush current	AC 16 A for 10 sec.			
Connection	rigid wire 2.5 mm² (AWG 14)			
Mounting	clip for 35 mm DIN rail, EN 60715			
Casing	plastic according to UL94 V-O. light grey			
Dimensions	67 x 50 x 46 mm			
Weight	approx. 90 g			
Fitting position	variable			
Operating/Storage temperature	-45 to +80 °C (-49 to +176 °F)			
Operating/Storage humidity	max. 90 % RH (non-condensing)			
Protection type	IP20			
Approvals	VDE, UL File No. E164102, CSA, EAC			

<sup>&</sup>lt;sup>1</sup> When connecting with wires, wire end ferrules must be used.

**Important note:** The contact system of the regulator is subjected to environmental influences, thus the contact resistance may change. This can lead to a voltage drop and/or self-heating of the contacts.

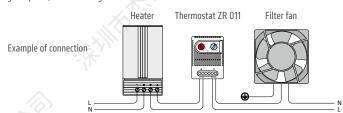

Art. No.	Setting range		Setting range	
01172.0-00	Contact breaker (NC)	0 to +60 °C	Contact maker (NO)	0 to +60 °C
01172.0-01	Contact breaker (NC)	+32 to +140 °F	Contact maker (NO)	+32 to +140 °F
01175.0-00	Contact breaker (NC)	10 to +50 °C	Contact maker (NO)	+20 to +80 °C
01175.0-01	Contact breaker (NC)	+14 to +122 °F	Contact maker (NO)	+68 to +176 °F
01176.0-00 <sup>2</sup>	Contact maker (NO)	0 to +60 °C	Contact maker (NO)	0 to +60 °C
01176.0-01 <sup>2</sup>	Contact maker (NO)	+32 to +140 °F	Contact maker (NO)	+32 to +140 °F

<sup>&</sup>lt;sup>2</sup> For regulating heat exchangers and fans (e. g. LE 019) and as an alarm contact for monitoring the interior temperature of electronic enclosures.